

输入COM端子必须接0V

DC24V
供电

0V

24V	0V	24V	0V	COM	COM	X0	X1	X2	X3	X4	X5	X6	X7	X10	X11	X12	X13	X14	X15	X16	X17	●	A	B
↓	↓	↑	↑	DC输入	DC输出	传感器型号:NPN																		RS485

TX2N-30MT

RS422
下载口

晶体管输出C0, C1, C2, C3, C4, C5端子必须接0V

